

# Universal display PH5100

## Operating manual



Version: 22.02.2013

# Content

1. Introduction .....	3
2. Safety instructions .....	3
2.1 General information .....	3
2.2 Proper usage .....	3
2.3 Qualified staff .....	3
2.4 Remaining risk .....	3
2.5 Legal responsibility .....	3
2.6 CE-Conformity .....	4
3. Description .....	4
4. Features .....	4
4.1 Signal input .....	4
4.2 Offset-Funktion .....	4
4.3 Alarms .....	4
4.4 Blocking initial of the alarm .....	6
4.5 Auto range function (AVTO.R) .....	6
4.6 Totalizing function .....	6
4.7 Totalizing/Integration time base (t.base) .....	6
4.8 Totalizing/Integration scale factor (t.ScF) .....	6
4.9 Batch totalizing function .....	6
4.10 F1 and F2 function keys .....	6
4.11 Over flow alarm .....	7
4.12 Minimum and maximum .....	7
4.13 24 VDC auxiliary voltage source .....	7
4.14 Interface .....	7
5. Installation .....	7
5.1 Mechanically installation .....	7
5.2 Electrical installation .....	8
5.3 Recommendations for the installation .....	8
6. Operation .....	9
7. Start up .....	9
8. Description of the parameters .....	10
8.1 Operation cycle .....	10
8.2 Alarm cycle .....	10
8.3 Input Signal level parameters .....	10
8.4 Totalizing cycle .....	11
8.5 Calibration cycle .....	12
8.6 Password protection .....	12
9. Specifications .....	14
10. Error messages, default and calibration .....	14
10.1 Error messages .....	14
10.2 Calibration and factor setting .....	15
11. Copyright .....	15
12. Disclaimer .....	15
13. Other regulations and standards .....	15
14. Techncal Support .....	15

## 1. Introduction

### Dear valued Customer!

Thank you for purchasing and using a product from our company. The universal digital panel meter PH5100 from LABOM Mess- und Regeltechnik GmbH could be used for a numerous number of applications.

For getting the highest effort out of this unit, we kindly ask you to follow the below mentioned instructions:

**Every person who is involved with the installation or usage of this unit, must read carefully and understand the installation manual and safety instructions!**

## 2. Safety instructions

### 2.1 General information

To ensure the safe operation of this unit the instructions that appear in this manual must be strictly observed. In addition, when used all applicable legal and safety regulations for the respective application must be observed. The same applies correspondingly to the use of accessories.

### 2.2 Intended usage

Units from the PH5100 are used for collecting and displaying of a variety of analogue sensor signals. Any other use is regarded not in accordance with the intended usage.



The LABOM universal panel meters PH5100 are not meant to be used as sole safety means to prevent dangerous situations on machinery and installations. Machinery and installations must be so designed that fault conditions can not lead to harmful situations to operating personnel (e.g. by independent limit value switches, mechanical locking etc.).

### 2.3 Qualified personnel

Units from the LABOM universal panel meter PH5100 must only be operated in accordance with the technical specifications by qualified personnel. Personnel regarded qualified is familiar with the installation, assembly, putting into operation and operation of the units and possesses adequate professional qualification for the task.

### 2.4 Remaining hazards

Units from the LABOM universal panel meter PH5100 are state of the art and safe to operate. A risk of danger can occur when deployed and operated improperly by untrained personnel.

In this manual remaining hazards are marked by the following warning symbol:



**This symbol indicates that non-observance of the safety guidelines may cause hazards to persons even serious injury or death and/or the possibility of property damage.**

### 2.5 Legal responsibility

Liability for material defects and defects of this documentation, particularly for the accuracy, correctness, freedom of protection or third party rights, completeness and/or usability - except for willful misconduct or gross negligence - is excluded.

## 2.6 CE-Conformity

The CE certificate is available at our company. We are pleased to send you a copy of it. Please feel free and contact us to get a copy.

## 3. Description

The universal panel meter PH5100 is a quite versatile process indicator with totalizing function. With a wide list of input types - thermocouples, thermo-resistance, voltage and current the PH5100 is capable of measuring the majority of the variables and sensors encountered in industrial processes.

It contains two alarms (six functions), sensor offset, configuration of parameters protected by password, USB communication, indication in degrees Celsius (°C) or Fahrenheit (°F), among others.

## 4. Features

### 4.1 Signal input

Type	CODE	Measurement range
Thermo couple J	<b>tc J</b>	Range: -110 °C to +950 °C (-166 °F to +1742 °F)
Thermo couple K	<b>tc K</b>	Range: -150 °C to +1370 °C (-238 °F to +2498 °F)
Thermo couple T	<b>tc t</b>	Range: -160 °C to +400 °C (-256 °F to 752 °F)
Thermo couple N	<b>tc n</b>	Range: -270 °C to +1300 °C (-454 °F to 2372 °F)
Thermo couple R	<b>tc r</b>	Range: -50 °C to +1760 °C (-58 °F to 3200 °F)
Thermo couple S	<b>tc S</b>	Range: -50 °C to +1760 °C (-58 °F to 3200 °F)
Thermo couple B	<b>tc b</b>	Range: 400 °C to +1800 °C (752 °F to 3272 °F)
Thermo couple E	<b>tc E</b>	Range: -90 °C to +730 °C (-130 °F to 1346 °F)
RTD (Pt100)	<b>Pt</b>	Range: -200 °C to +850 °C (-328 °F to 1562 °F)
0 to 20 mA	<b>L020</b>	Linear analogue signal Indication programmable from -1999 to 30000.
4 to 20 mA	<b>L420</b>	
0 to 50 mV	<b>L050</b>	
0 to 5 VDC	<b>L05</b>	
0 to 10 VDC	<b>L0,10</b>	

Table 1: Input Types

### 4.2 Offset-Funktion

Allows fine adjustments to the PV indication, correcting measurement errors that appear, for example, after the replacement of the temperature sensor.

### 4.3 Alarms

The LABOM digital universal panel meter PH5100 has two alarm outputs:

**ALARM1** - Relay SPST - Available on terminals 5 and 6.

**ALARM2** - Relay SPST- Available on terminals 3 and 4.

The alarms can assume the functions described on **Table 02**:

<b>off</b>	Alarm off.	
<b>Lo</b>	Alarm of the Absolute Minimum Value. It triggers when the value of the <b>PV</b> is <b>below</b> the value defined by the alarm <i>Setpoint</i> ( <i>SPA1</i> or <i>SPA2</i> ).	
<b>Hi</b>	Alarm of the Absolute Maximum Value. It triggers when the value of the <b>PV</b> is <b>above</b> the value defined by the alarm <i>Setpoint</i> .	
<b>dIF</b>	Alarm of the Differential Value. In this function the parameters “ <b>SPA1</b> ” and “ <b>SPA2</b> ” represent errors (difference) between the PV and one reference value ( <b>ALrF</b> ).	
	SPA1 positive	SPA1 negative
<b>dIFL</b>	Alarm of the Minimum Differential Value. It triggers when the value of the PV is <b>below</b> the point defined by: <b>ALrF-SPA1</b> (using alarm 1 as an example).	
	SPA1 positiv	SPA1 negativ
<b>dIFH</b>	Alarm of the Maximum Differential Value. It triggers when the value of the PV is <b>above</b> the point defined by: <b>ALrF+SPA1</b> (using alarm 1 as an example).	
	SPA1 positiv	SPA1 negativ
<b>tLo</b>	Alarm of the Absolute Minimum Value. It triggers when the value of the totalizer (TOT) is <b>below</b> the value defined by the alarm <i>Setpoint</i> .	
<b>tHi</b>	Alarm of the Absolute Maximum Value. It triggers when the value of the totalizer (TOT) is <b>above</b> the value defined by the alarm <i>Setpoint</i> .	
<b>tOFL</b>	Alarm at overflow of totalizer.	
<b>IErr</b>	Alarms of the Sensor Break (Sensor <i>Break Alarm</i> ). It is activated when the Input presents problems such as interrupted sensor, bad connection, etc.	

**Table 02:** Alarm functions

**Note:** The figures are also valid for Alarm 2 (SPA2).

#### 4.4 Blocking initial of the alarm

The initial blocking option inhibits the alarm from being recognized if an alarm condition is present in the process when the indicator is first energized. The alarm will be enabled only after the occurrence of no alarm condition.

The initial blocking is useful, for example, when one of the alarms is set up as a minimum value alarm, which may cause the activation of the alarm soon upon the process start-up; an occurrence that may be undesirable in many cases.

The initial blocking feature is not valid for the functions **t.lo**, **t.Hi**, **t.ofl** and **ierr**.

#### 4.5 Auto range function (**AUROR**)

The indication limits can be set by using operator's knowledge about the process. By knowing the relation between the current process variable value and the desired indication in two points the indication limits can be easily set.

The known PV values are set through **P1SET** and **P2SET** parameters which are presented when the Auto Range function is enabled: **Autos: 425**.

If the function Auto Range is used the parameters **inLL** and **inHL** are automatically defined.

This function is only available for analog linear input signals.

#### 4.6 Totalizing function

This function allows continuous integration of instant PV values.

This continuous integration is stored in a non volatile internal memory and can also be presented at the indicator display by choosing TOTAL screen which is identified by the symbol TOT. This symbol is always presented when the TOTAL is being presented.

The TOTAL value is presented with up to 9 digits (999999999) but when this value is bigger than 99999 it is splitted in two separate screens indicating the most and least significant parts and identified with the symbols **TOT HIGH** and **TOT LOW** on the display.

The TOTAL value can be erased through the keyboard or can be reset everytime the indicator is powered up.

#### 4.7 Totalizing/Integration time base (**tBASE**)

The instant PV value integration is executed at fixed time interval which is defined by a configuration parameter.

The Time Base options are second, minute, hour and day.

#### 4.8 Totalizing/Integration scale factor (**tScF**)

Before being added to the total, the instant PV value is multiplied by the Scale Factor.

#### 4.9 Batch totalizing function

This function allows the operator to execute the totalization only when a pre configured function key is pressed.

This function allows the user to add or subtract the instant PV value to/from the total accumulated value.

#### 4.10 F1 and F2 function keys

The F1 and F2 Keyscan execute several different functions which should be set by the user when configuring the indicator.

<b>no</b>	Key not used to any special function.
<b>bAdd</b>	Executes Batch Function - Addition
<b>bSub</b>	Executes Batch Function - Subtraction
<b>rStLo</b>	Reset Total value
<b>d-h i</b>	Present maximum read value
<b>d-lo</b>	Present minimum read value
<b>r.loh i</b>	Reset minimum and maximum values

Two different functions can be assigned to F1 and F2 keys. The function to be executed, Primary or Secondary, is determined by the amount of time the function key keeps pressed. If the function key keeps pressed for less than 1 second the Primary function is executed.

If the key keeps pressed for more than 3 seconds then the Secondary function is executed.

The combination of the keys F1 and F2 pressed simultaneously can also execute a Special Function. All Special Functions are available to the operator as follows:

- F1\_1:** F1 Key, Primary Function.
- F1\_2:** F1 Key, Secondary Function.
- F2\_1:** F2 Key, Primary Function.
- F2\_2:** F2 Key, Secondary Function.
- F12\_1:** F1+F2 Keys, Primary Function.
- F12\_2:** F1+F2 Keys, Secondary Function.

The totalization alarm functions **t.Lo** and **T.Hi** allow the user to notify when a total value is reached.

The alarm defined as Totalization Minimum Value Alarm (**t.Lo**) is set when the totalization value goes below the configured set point.

The alarm defined as Totalization Maximum Value Alarm (**T.Hi**) is set when the totalization value goes above the configured set point.

As the totalization value can indicate up to 99999 99999 (or -9999 99999) the set point values behave the same way. If the SP being set goes above 99999 (or below -9999) the second SP part is displayed allowing the operator to see values up to 99999 99999 (or -9999 99999).

The flags **HIGH** and **LOW** identify if the part being displayed is the SP most significant part (HIGH) or the least significant part (LOW).

The totalization alarm (SP) is defined through the values SPA1 and SPA2. These two parameters behave different from other parameters. The Back key allows the operator to change the SP decimal digit to be set.

#### 4.11 Over flow alarm

This alarm function is set when the totalized value surpasses 9999999999, which is the maximum indication value.

#### 4.12 Minimum and maximum

The indicator is continuously storing the extreme input indication measurements, or the minimum and maximum values. These values can be displayed at any time by the operator by pressing the keys F1 and F2. Notice that the function Keys should be set to **dh** and **dl**.

To reset the maximum and minimum values and start another monitoring cycle, just execute the function **r.loh**, which can be assigned to the keys F1 and F2. When the indicator is powered off this information is not stored.

#### 4.13 24 VDC auxiliary voltage source

The standard version of the PH5100 provides an auxiliary power supply (24 VDC) for exciting field transmitters (terminal 13 on the rear panel).

#### 4.14 Interface

USB-Port (virtual COM-Port) to program the digital display.

## 5. Installation

### 5.1 Mechanical installation

The indicator is meant for panel mounting. The sequence of steps is:

- Prepare a cut out of 93.0 by 45.5 mm on the panel
- Remove the mounting clamp from the indicator
- Insert the indicator into the cut out from the front side of the panel
- Place the clamp on the indicator again, pressing until firm grip to the panel



## 5.2 Electrical installation

The terminal configuration is shown in Figure 01.

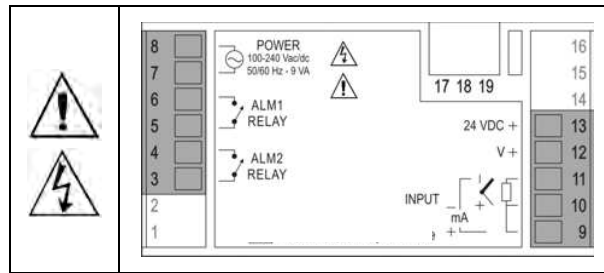


Figure 01: Inputs connections and power supply

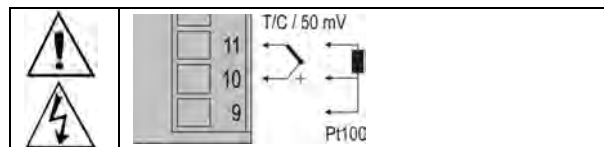


Figure 02: Thermocouple, Pt100 and 50 mV signal connection

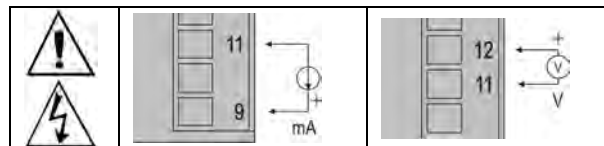


Figure 03: Current (mA) and Voltage (V) signal connection

This indicator offers an auxiliary 24 Vdc +/-15% at 50 mA power supply which is typically applied to power up two wire 4 to 20 mA field transmitters. The **Figure 04** presents the wiring for this application.

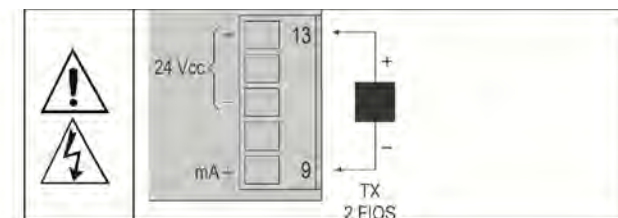


Figure 04: Auxiliary 24 Vdc usage example

## 5.3 Recommendations for the installation

- To minimize the pick-up of electrical noise, the low voltage DC connections and the sensor input wiring should be routed away from high-current power conductors. If this is impractical, use shielded cables. In general, keep cable lengths to a minimum.
- The input signals conductors shall be positioned throughout the factory separate from the output and the power supply conductors, in grounded conduits if possible.
- The power supply of the electronic instruments shall come from a proper source for the instrumentation network.
- It is recommended to use RC FILTERS (0,1uF in series with 100 ohms) to suppress the noise generated by contactors coils, solenoids, etc.



## 6. Operation

The indicator front panel, together with its elements, can be seen on:



Figure 02: Identification of the front panel parts.

**Display:** Shows the process variable (**PV**), the configuration parameters prompts and their respective values/conditions.

**Indicators A1 and A2:** signalize the occurrence of an alarm condition.

**Key P:** Used to walk through the parameters in the menu cycles.

**▲ Increment key and ▼ Decrement key:** Used to change parameter values.

**Key ◀:** Go back to the previous displayed parameter. This key changes its behavior starting to set the decimal digit to set.

## 7. Start up

When the controller is powered up, its firmware version is displayed for 3 seconds, after which the PH5100 starts normal operation, when the value of **PV** is displayed and the outputs are enabled.

Before the indicator is ready to be used in a given process, it requires some basic configuration, consisting of assigning values to the parameters according to the desired behavior. The user shall understand the importance of each parameter and determine a valid condition or a valid value for each one of them.

The configuration parameters are grouped in levels according to their affinity. The 5 parameters levels are:

- 1 – Operation
- 2 – Alarms
- 3 – Input
- 4 – Totalizer
- 5 – Calibration

The “**P**” key provides the access to the levels and to the parameters of these levels.

Keeping the **P** key pressed, at every 2 seconds, the indicator jumps from one level to another, presenting the first parameter of each level:

**Measurement PV >> FUR I >> TYPE >> tot >> PASS >> PV ...**

To enter into a particular level, simply release the **P** key when the first parameter in that level is displayed.

To walk through the parameters in a level, press the **P** key with short strokes. To go back to the previous parameters, use the ◀ Key.

The display alternates the presentation of the parameter prompt and its value. The parameter value is displayed with a light blinking to differentiate it from the parameter prompt.

Depending on the level of parameter protection adopted, the parameter **PASS** precedes the first parameter in the level where the protection is active. See section Protection configuration.

## 8. Description of the parameters

### 8.1 Operation cycle

<b>PV</b>	<b>Indication Display of PV:</b> The value of the measured variable (PV) is shown on the main display (red).
<b>TOT</b>	<b>Totalizing value:</b> When this value is bigger than 99.999 it is splitted in two separate screens indicating the most and least significant parts and identified with the symbols TOT HIGH and TOT LOW on the display
<b>SP1</b> <b>SP2</b>  SetPoint Alarm	<b>Alarm SP:</b> Value that defines the alarm activation point. For the alarms set up with the functions of the type <b>Differential</b> or <b>Band</b> , these parameters define the maximum differences accepted between <b>PV</b> and a reference value defined in the parameter <b>ALrF</b> . For the alarm function <b>ierr</b> , this parameter is not used. Parameters shown in this level only when enabled in the parameters <b>SP E</b> and <b>SP2E</b> .

### 8.2 Alarm cycle

<b>FuR1</b> <b>FuR2</b>	Alarm Functions. It defines the functions of the alarms among the options in <b>Table 02</b> (page 5).
<b>ALrF</b> Alarm Reference	Reference value used by the alarms with differential function, minimum differential or maximum differential.
<b>dPR1</b> <b>dPR2</b> Alarm Referenz	Totalization alarm SP decimal point.
<b>SP1</b> <b>SP2</b> SetPoint Alarm	Alarm SP: Value that defines the point of activation of the alarm outputs. For the alarms programmed with the functions of the type <b>Band</b> and <b>Differential</b> , these parameters represent the deviations. For the <b>iErr</b> and <b>LoF1</b> alarm functions, this parameter has no meaning.
<b>SP E</b> <b>SP2E</b> SP enable	It allows the parameters <b>SP1</b> and <b>SP2</b> to be displayed also in the indicator operation cycle. <b>YES:</b> Shows the parameters <b>SP1/SP2</b> in the operation cycle. <b>NO:</b> DOES NOT show the parameters <b>SP1/SP2</b> in the operation cycle.
<b>bIR1</b> <b>bIR2</b> BlockingAlarm	Alarms Initial Blocking (see section 4.5). <b>YES:</b> Enables the initial blocking <b>NO:</b> Inhibits the initial blocking
<b>HYR1</b> <b>HYR2</b> Hysteresis of Alarms	Alarm Hysteresis. It defines the difference between the value of PV at which the alarm is triggered and the value at which it is turned off.
<b>FLSh</b> Flash	It allows signalization of an alarm conditions occurrence by flashing the indication of PV on the indication display. <b>YES:</b> Enables alarm signalization by flashing <b>PV</b> . <b>NO:</b> Disables the flashing <b>PV</b> .

### 8.3 Input Signal level parameters

<b>TYPE</b> Typ	Input Type. Selection of the input type, used by the indicator. Refer to <b>Table 01</b> on page 4.
<b>FLtr</b> Filter	Digital Input Filter – Used to improve the stability of the measured signal (PV). Adjustable between 0 and 20. At 0 (zero) it means filter turned off and 20

	means maximum filter. The higher the filter value, the slower is the response of the measured value.	
<b>dPPD</b> Decimal Point	It determines the position of the decimal point on the display.	
<b>unit</b> Unit	It defines the temperature unit to be used: °C indication in Celsius. °F indication in Fahrenheit.	
<b>OFFS</b> Offset	Parameter that allows the user to make fine adjustments to the indicated PV value.	
<b>AutoR</b> Auto Range	Enables the scaling of the <b>PV</b> by applying the input signal.	
<b>P1SET</b>	PV value to the first process known point when <i>Auto Range</i> function is enabled ( <b>avto.r = yes</b> ).	
<b>P2SET</b>	PV value to the second process known point when <i>Auto Range</i> function is enabled ( <b>avto.r = yes</b> ).	
<b>inLL</b> Input Low Limit	It defines the <u>lower</u> value of the indication range when the input types of 0-20 mA, 4-20 mA, 0-50 mV, 0-5 V and 0-10 V are used ( <b>avto.r = NO</b> ).	
<b>inHL</b> input High Limit	It defines the <u>upper</u> value of the indication range when the input types of 0-20 mA, 4-20 mA, 0-50 mV, 0-5 V and 0-10 V are used ( <b>avto.r = NO</b> ).	
<b>F1.1</b>	Defines the function to be executed by F1 and F2 keys:	
<b>F1.2</b>		<b>no</b> No associated function
<b>F2.1</b>		<b>bAdd</b> Executes Batch Function - Addition
<b>F2.2</b>		<b>bSub</b> Executes Batch Function - Subtraction
<b>F12.1</b>		<b>rStto</b> Reset Total value
<b>F12.2</b>		<b>d-H</b> Present maximum read value
		<b>d-l</b> Present minimum read value
	<b>r.lo</b> Reset minimum and maximum values	

#### 8.4 Totalizing cycle

<b>tot</b>	Defines the indicator operation mode. <b>on</b> Totalizing function enabled <b>off</b> Totalizing function disabled <b>bAtch</b> Batch operation
<b>t.dPPD</b>	Totalizer Decimal Point Position Defines the decimal point position when presenting the total value.
<b>t.bASE</b> Totalizer time base	Defines the time totalizing function time base. <b>Sec</b> seconds <b>MIN</b> minutes <b>Xovr</b> hours <b>Day</b> days
<b>t.ScF</b> TotalizerScale Factor	Totalizer Scale Factor. Can be set from 0,001 to 65,0.
<b>t.Locut</b> LowCut	Totalizer low cut value. Defines the lowest PV instant value limit considered for totalization and do not integrate any value below.
<b>PowerSt</b> Power Up Reset	Power up Reset Defines if the total value is restored or reset on indicator power up <b>YES</b> Reset Totalizer <b>no</b> No reset of the Totalizer

### 8.5 Calibration cycle

All types of input are calibrated in the factory. In case a recalibration is required; it shall be carried out by a specialized professional. In case this cycle is accidentally accessed, do not perform alteration in its parameters. The factory calibration can be restored in the parameter **rstr**.

<b>PASS</b>	<u>Password</u> . Entering the Access password. This parameter is presented before the protected cycles. See item Protection of Configuration.
<b>Calib</b>	<u>Calibration</u> . Enables the possibility for calibration of the indicator. When the calibration is not enabled, the related parameters are hidden.
<b>inLE</b>	<u>Input Low Calibration</u> . Indication of the low scale calibration signal applied to the input.
<b>inHE</b>	<u>Input High Calibration</u> . Indication of the full scale calibration signal applied to the input.
<b>rStr</b>	<u>Restore</u> . It restores the factory input calibration and the indicator factory parameters, disregarding any modifications carried out by the user.
<b>CJ</b>	<u>Cold Junction</u> . Temperature of the indicator cold junction.
<b>PASC</b>	<u>Password Change</u> . It allows the definition of a new access password, always different from zero.
<b>Prot</b>	<u>Protection</u> . Sets up the Level of Protection. See <b>Table 03</b> (page 13).
<b>FrEQ</b>	<u>Frequency</u> . Frequency of the local electrical network.
<b>SnH</b>	Serial number 4 most significant digits.
<b>SnL</b>	Serial number 4 least significant digits.

### 8.6 Password protection

The PH5100 indicator provides means for protecting the parameters configurations, not allowing modifications to the parameters values, avoiding tampering or improper manipulation. The parameter **Protection (PROL)** in the Calibration level determines the protection strategy, limiting the access to particular levels, as shown in the table below.

ProtectionLevel	ProtectedLevels
1	Only the Calibration level is protected.
2	Totalization and Calibration levels are protected.
3	Input, Totalization and Calibration levels are protected.
4	Alarms, Input, Totalization and Calibration levels are protected.

**Table 3:** Levels of Protection of the configuration

#### ACCESS PASSWORD

The protected levels, when accessed, request the user to provide the **Access Password** for granting permission to change the configuration of the parameters on these levels.

The prompt **PASS** precedes the parameters on the protected levels. If no password is entered, the parameters of the protected levels can only be visualized.

The Access Password is defined by the user in the parameter *Password Change* **PASC** present in the Calibration Level. **The factory default for the password code is 1111.**

### PROTECTION OF THE ACCESS PASSWORD


The protection system built into the controller blocks for 10 minutes the access to protected parameters after 5 consecutive frustrated attempts of guessing the correct password.

### MASTER PASSWORD

The Master Password is intended for allowing the user to define a new password in the event of it being forgotten. The Master Password doesn't grant access to all parameters, only to the *Password Change* parameter (**PAS.()**). After defining the new password, the protected parameters may be accessed (and modified) using this new password.

The master password is made up by the last three digits of the serial number of the controller **added** to the number 9000.

As an example, for the equipment with serial number 07154321, the master password is 9 3 2 1.

The indicator serial number can be obtained by pressing  for 5 seconds.

## 9. Specifications

DIMENSIONS:	96 mm x 48 mm x 35 mm
Panel cut out	93,0 mm x 45,5 mm
Approximate weight:	110 g
POWER SUPPLY:	100 VAC to 240 VAC ( $\pm 10\%$ ), 50/60 Hz
	100 VDC to 240 VDC ( $\pm 10\%$ )
Maximum consumption	6 VA
ENVIRONMENTAL CONDITIONS:	
Operation Temperature:	0 °C to 50 °C
Relative Humidity:	80 % @ 30 °C
	For temperatures above 30 °C, reduce 3 % per °C
	Indoor use; Installation Category II, Pollution Degree 2; altitude < 2000 meters
INPUT:	
	According to <b>Table 01</b> on page 4
Internal Resolution:	65.535 levels (16 bits)
Display Resolution:	32.000 levels (from -1.999 to 30.000)
Input reading rate:	up to 55 per second
Precision:	Thermocouples <b>J, K, T, E</b> : 0,25 % of the span $\pm 1$ °C
	Thermocouples <b>N, R, S, B</b> : 0,25 % of the span $\pm 3$ °C
	Pt100 (RTD): 0,2 % of the span
	4 to 20 mA, 0 to 50 mV, 0 to 5/10 V: 0.2 % of the span
Input impedance:	Pt100, T/C, 0 to 50 mV: > 10 M $\Omega$
	0 to 5 V, 0 to 10 V: > 500 k $\Omega$
	4 to 20 mA: 100 $\Omega$
Measuring of the Pt100:	3 wire type, ( $\alpha=0.00385$ ), with compensation of the cable length, max 50 meters, excitation current of 0.170 mA.
OUTPUT:	
Output ALARM1:	Relay SPST; 240 VAC / 30 VDC / 1.5 A
Output ALARM2:	Relay SPST; 240 VAC / 30 VDC / 1,5 A
24 VDC source:	24 VDC ( $\pm 15\%$ ) / 50 mA max.
CASE:	Polycarbonat (PC) UL94 V-2
BACK PANAL:	ABS+PC UL94 V-0
CONNECTIONS (WIRING):	Plug-in block terminals, 5 mm pitch

**STARTS OPERATION AFTER 3 SECONDS CONNECTED TO THE POWER SUPPLY.**

## 10. Error messages, default and calibration

### 10.1 Error messages

Connection errors and inadequate programming are the most common errors found during the controller operation. A final revision may avoid loss of time and damages.

The controller displays some messages to help the user identify problems.







MESSAGE	DESCRIPTION OF THE PROBLEM
----	Open input. No sensor o signal.
<b>Err 1</b>	Connection and/or configuration errors. Check the wiring and the configuration.
<b>Err 6</b>	

Other error messages may indicate hardware problems requiring maintenance service.

## 10.2 Calibration and factor setting

All inputs are factory calibrated and recalibration should only be done by qualified personnel. If you are not familiar with these procedures do not attempt to calibrate this instrument.

The calibration steps are:

- a) Configure the input type to be calibrated.
- b) Configure the lower and upper indication limits for the maximum span of the selected input type.
- c) Connect to the input terminals a signal corresponding to a known indication value a little above the lower display limit.
- d) Access the parameter **inLE**. With the keys  and  adjust the display reading to match the applied signal. Then press the  key to store.
- e) Inject a signal that corresponds to a value a little lower than the upper limit of indication.
- f) Access the parameter **inHE**. With the keys  and  adjust the display reading to match the applied signal. Then press the  key to store.

**Note:** When checking the controller calibration with a Pt100 simulator, pay attention to the simulator minimum excitation current requirement, which may not be compatible with the 0.170 mA excitation current provided by the controller.

## 11. Copyright

The contents of this document are the property of the company LABOM Mess- und Regeltechnik GmbH. Copying or reproduction is prohibited without prior approval. Contents of this document refer to the device described therein.

## 12. Disclaimer

All technical content within this document can be modified without notice. The content of this document is content of a recurring audit.

In losses due fire, earthquake, interventions by third or other accidents or intentional or accidental misuse or incorrect using or using under unnormal conditions, repairs will be invoiced.

LABOM Mess- und Regeltechnik is not liable for inadvertently loss due using or not using this product, such as loss of business income. LABOM Mess- und Regeltechnik is not liable for cases of an unnormal usage.

## 13. Other regulations and standards

### WEEE Informationen



Disposal of old electrical and electronic equipment (as in the European Union and other European countries with separate collection systems). This symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead, it should be taken to an applicable collection point for the recycling of electrical and electronic equipment. If the product is disposed of correctly, you will help prevent potential negative environmental factors and human health, which could otherwise be caused by inappropriate disposal. The recycling of materials will help to conserve natural resources. For more information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## 14. Technical Support

If you have any problems or questions please contact us at:

**LABOM Mess- und Regeltechnik GmbH**  
Im Gewerbepark 13 • 27798 Hude • Germany  
Phone: +49 4408 804-0 • Fax -100  
info@labom.com  
www.labom.com